digitech

LED
Smart TV 12V DC

Model:
GH5200/GH5202/GH5204/GH5226/GH5228

Please read and save all instructions to ensure safe and effective use of this product.

Quick Start Guide

digitech

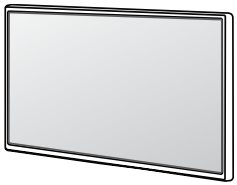



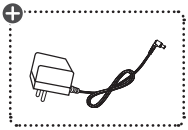

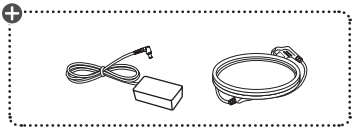

1

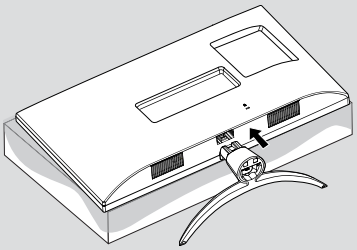

2

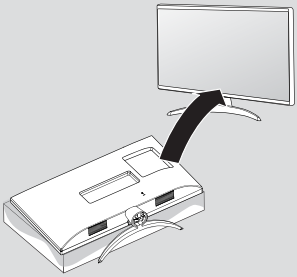

3

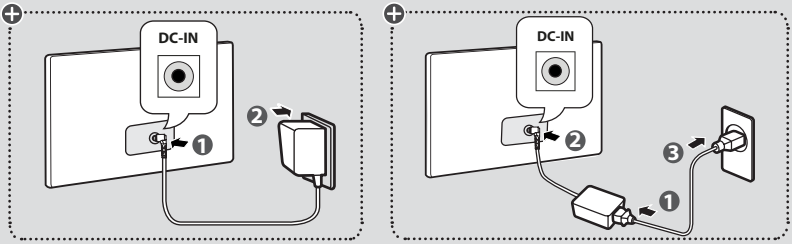

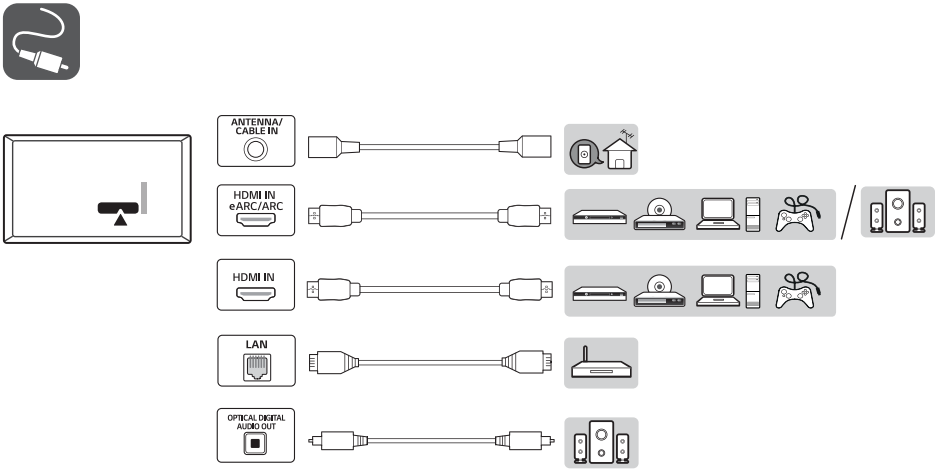
ANTENNA/
CABLE IN
HDMI IN
eARC/ARC
HDMI IN
LAN
OPTICAL DIGITAL
AUDIO OUT


USB IN

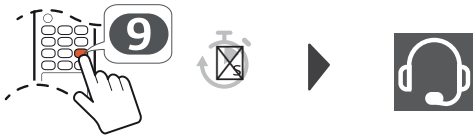
9

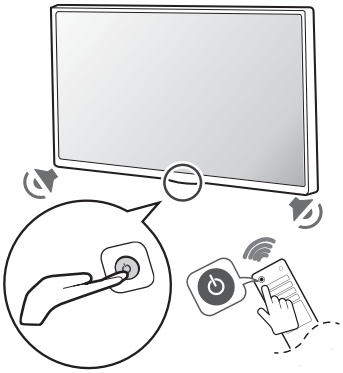

SPECIFICATIONS

Product specifications may be changed without prior due to upgrade of product functions.

Models	Marketing Description	Net weight（kg）Without stand	Gross weight（kg）With stand	Area of Use
GH5204	Digitech 18.5"/47cm HD LED Smart TV 12V DC WebOS	2.13	3.3	AUS only
GH5200	Digitech 23.8"/60cm FHD LED Smart TV 12V DC WebOS	2.4	3.4	
GH5202	Digitech 32"/81cm HD LED Smart TV 12V DC WebOS	3.13	5.13	
GH5220	Digitech 18.5"/47cm HD LED Smart TV DVD Combo 12V DC WebOS	2.56	3.79	
GH5222	Digitech 23.8"/60cm FHD LED Smart TV DVD Combo 12V DC WebOS	2.7	3.83	
GH5224	Digitech 32"/81cm HD LED Smart TV DVD Combo 12V DC WebOS	3.56	5.62	
GH5226	Digitech 23.8"/60cm FHD LED Smart TV 12V DC WebOS	2.13	3.3	NZ only
GH5228	Digitech 32"/81cm HD LED Smart TV 12V DC WebOS	3.13	5.13	
GH5230	Digitech 23.8"/60cm FHD LED Smart TV DVD Combo 12V DC WebOS	2.7	3.83	

COMPONENTS

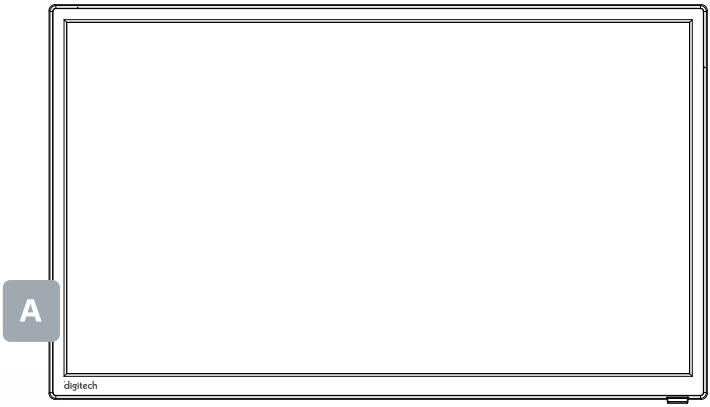



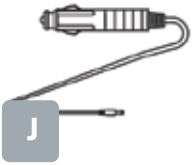

A LED Smart TV

B Standard remote control

D Stand (x2)

J 12V/24V Accesssory Plug

E M4 x 12mm screw (x4)

F AAA battery (x4)

G Quick start guide

H Warranty card

I Mains Adaptor

K TV Safety Strap

NOT INCLUDED

Phillips head screwdriver, antenna cable, broadband internet connection.

STANDARD REMOTE CONTROL

Power Turns the TV on and off

Input Input Changes the input source.

LIST Accesses the saved programmes list.

Shows programme guide.

INFO Shows information on the current program.

SPA Enables SAP (Secondary Audio Program) Feature.

QUICK ACCESS ** Edits QUICK ACCESS.

QUICK ACCESS is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.

Volume Buttons
Adjusts the volume level.

Programme Buttons
Scrolls through thesaved programmes.

Home Accesses the Home menu.

** **Home** Launches the last used apps.

OK Selects menus or options and confirms your input.

** **OK** Accesses the [Magic Explorer]. Whenusing [Tv Guide], [Settings], [Sports Alert],or [Art Gallery], press and hold down on the text.

Starts to record and displays record menu. (Only TimeMachine supported model)

0-9 Number Button Enters numbers.

9** Accesses the [Quick Help].

More Actions Displays more remote control functions.

Recalls your preferred subtitle in digital mode.

Mute Mutes all sounds.

** **Mute** Mute Accesses the [Accessibility] menu.

Navigation Buttons (up/down/left/right)
Scrollsthrough menus or options.

Q.Settings Accesses the Quick Settings.

Back Returns to the previous level.

Search Check for recommended content. (Some recommended services may not be available in some countries.)

You can watch TV or LG Channels.

Clears on-screen displays and returns to TV viewing.

Control Buttons Control buttons for media contents.

These access special functions in some menus.

NETFLIX prime video Disney+ LG Channels

Shortcut Buttons

***Note:** Teletext is no longer available in Australia. Depending on your region, this function may or may not be applicable.

ASSEMBLY AND INSTALLATION

BEFORE YOU GET STARTED

Spread cushioning flat to lay the TV on. This will help to prevent damage.

1. Stand assembly

a. Attach stands to base of TV, ensuring 'L' and 'R' markings on the TV and stand match.

b. Insert four M4 x 12mm screws and use Phillips head screwdriver (not supplied) to tighten.

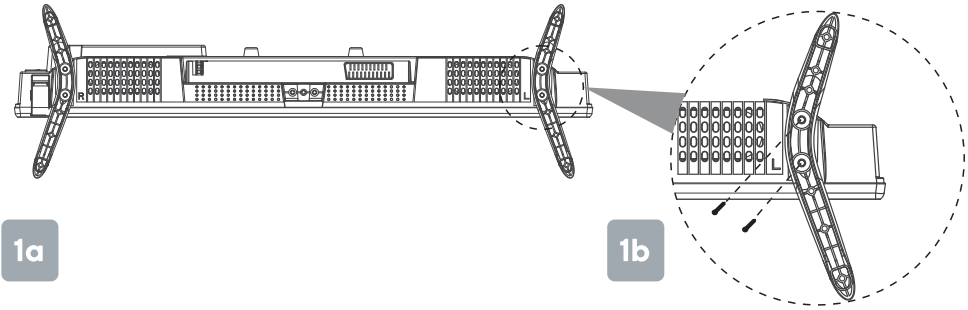

2. Remote control assembly

a. Open the battery compartment cover on the back side.

b. Insert batteries (x2 1.5V AAA size for the standard remote, x2 1.5V AAA size for the DVD remote) making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.

c. Replace battery compartment cover.

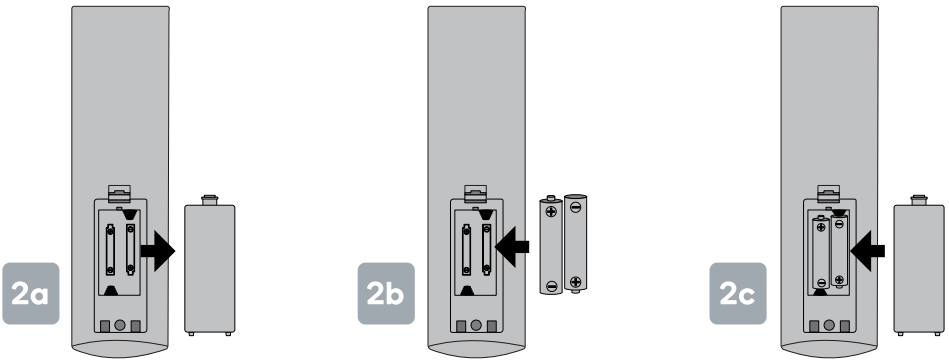

3. Connect to antenna

a. Connect an antenna cable (not supplied) via the 'ANT' input port at the back of the TV.

b. Ensure the antenna cable is also connected to a working antenna, either via an antenna wall socket in your home, or directly.

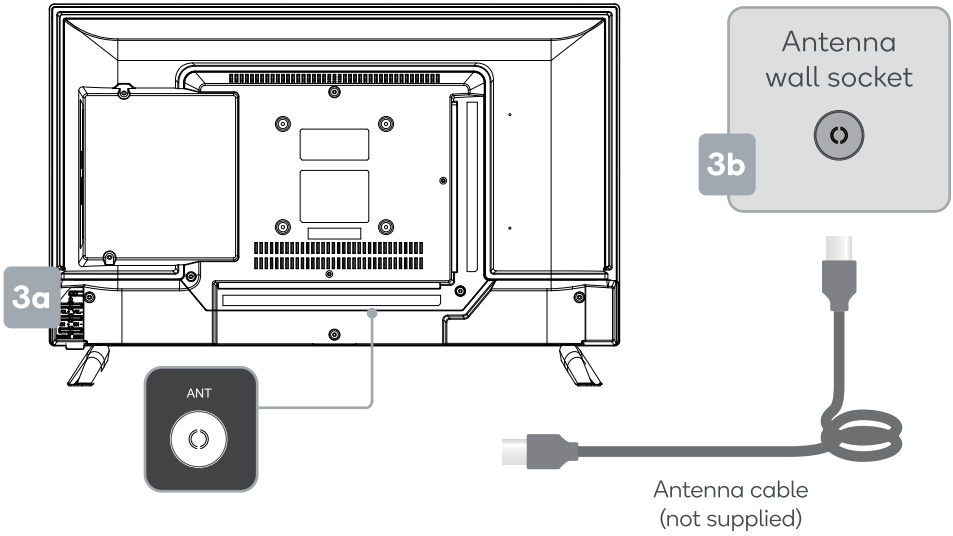

4. Turning TV on

Plug the power cord into a suitable power outlet, then press the POWER (⏻) button on the remote control, making sure to aim it at the sensor at the front of the TV. Alternatively, you can press the power button on the lower side of the back panel on the TV.

TURNING TV OFF

Press the POWER (⏻) button on the remote control to enter standby mode. To power down the TV completely, unplug the power cord from the power outlet.

Do not leave your set in standby mode for long periods of time. If you will not use the TV for a long time, it is recommended to unplug the set from both the power outlet and aerial.

TV buttons

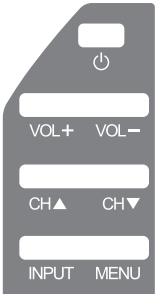

POWER (⏻): Turns the TV on and off.

VOL+: Increases the volume. In the TV menu system, it acts like the right arrow on the remote control and can be us to select menu options.

VOL-: Decreases the volume. In the TV menu system, it acts like the left arrow on the remote control and can be usec to select menu options.

CH▲: Scans up through the channel list. In the TV menu system, it acts like the up arrow on the remote control and can be used to select menu options.

CH▼: Scans down through the channel list. In the TV menu system, it acts like the down arrow on the remote control and can be used to select menu options.

INPUT: Displays the Source Select List.

MENU: Displays the TV Main Menu.

INPUTS AND PORTS

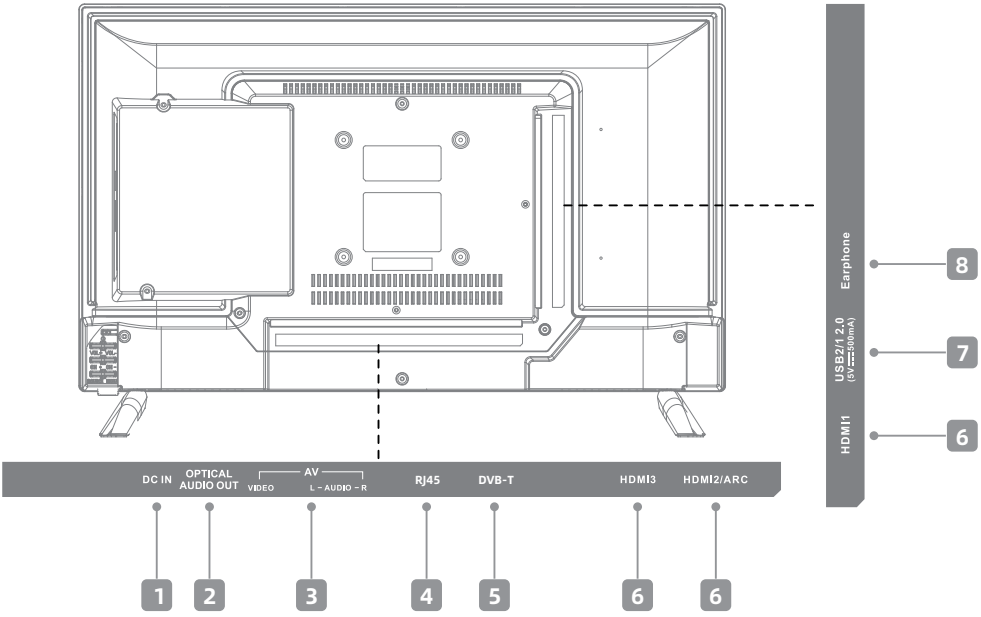

1 DC in
2 Digital audio (Optical out)
3 Composite video and audio (RCA)
4 Ethernet port (LAN)
5 Antenna
6 HDMI (x3; ARC support on HDMI 2)
7 USB 2.0 (x2; 5V ⎓ 500mA)
8 Headphone jack (3.5mm line out)

WALL MOUNT SPECIFICATIONS

Compatible wall-mount size	Screw size for connecting the TV to the wall mount
VESA 100*100(mm)	M4x10(mm)*

** The length of the screw specified is only a recommendation; actual length required can vary depending on the type of wall mount used.*

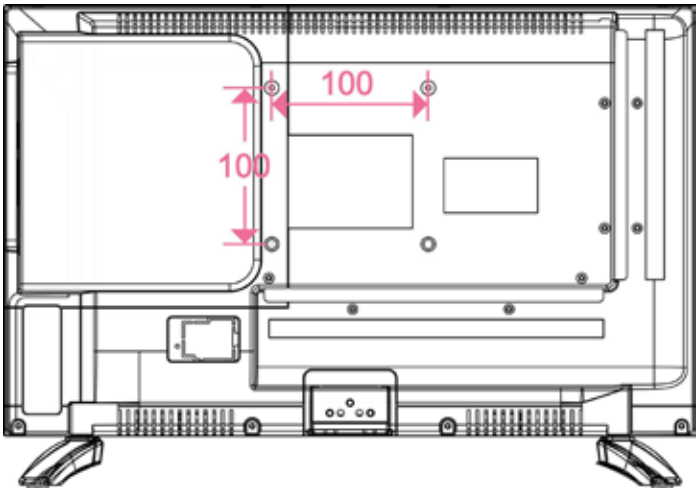

Note:

1. A wall mount is not included with the TV; it needs to be purchased separately.
2. Use only VESA-compatible wall mounts according to the specifications recommended for this model. Use of other wall mounts, or inappropriate installation may cause personal injuries or damage to the TV.
3. Please follow all instructions from the user manual of your chosen wall mount.

STAND INSTALLATION

Your TV is packaged with the unit and the legs separate. Unless the TV is wall-mounted, the legs must be securely attached to the TV before use.

Step 1
Place the TV face down on a soft cloth or cushion to prevent the panel from being damaged.

Step 2
Align the screw holes on each Leg to the screw holes on the bottom of the TV.

Step 3
Attach the Legs to the TV using the 4x Screws provided.

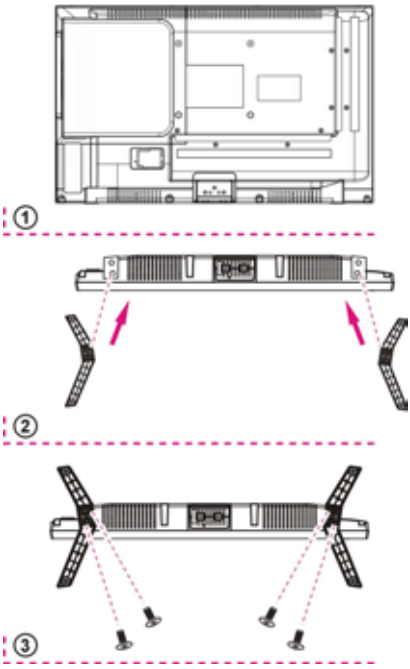

NOTES:

1) Unplug the power plug first when installing or removing the TV Stand.
   To avoid any damage to this TV, ask someone else for assistance when installing or removing the TV stand.

GENERAL PARTS

MAIN UNIT

Front View

Back View

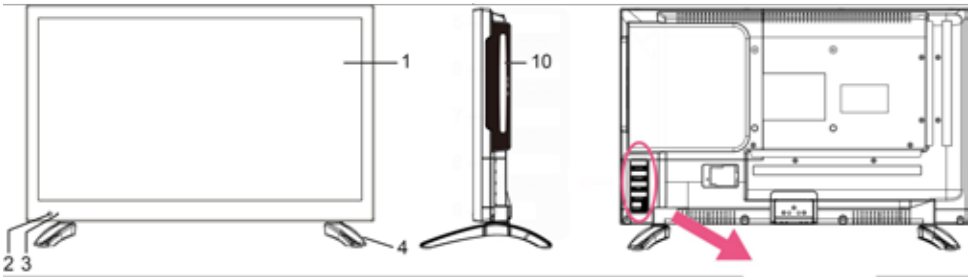

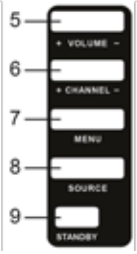

1. LED display screen
2. Remote control sensor
3. Power indicator- In standby mode the indicator light will display red color; when turned on the indicator light will display blue color.
4. Stand holder
5. VOL +/- button- To increase/decrease the volume level or move left/right.
6. CH +/- button- To select next/previous channel or move up/down.
7. MENU button- To enter menu setting page.
8. SOURCE button- To select the input source.
9. STANDBY button- To turn on the TV/switch it to standby.
10. Disc slot- To insert a disc according to the silk screen on the side of this slot.

BASIC CONNECTION

● Ensure all the cables are disconnected from the main unit before connecting to a power source.

● Read through the instructions before connecting other equipments.

CONNECTING TO A POWER SOURCE

This TV can be powered in two ways:

1. From mains supply via the mains plug included.
2. From 12V supply via the 12V Car Adaptor included.

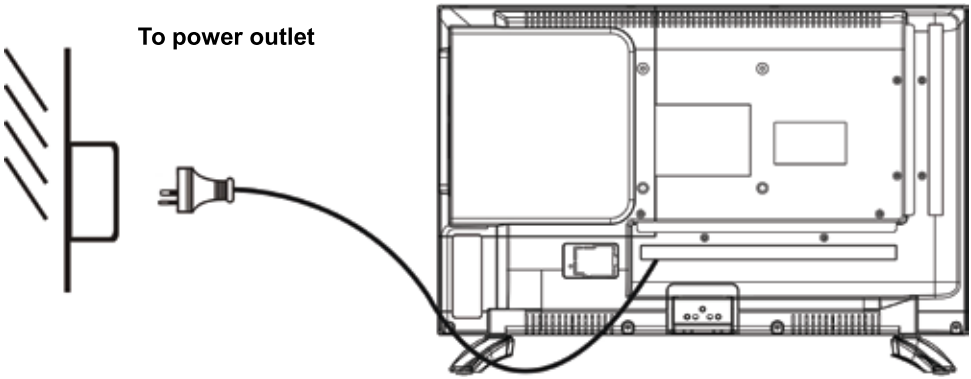

OR

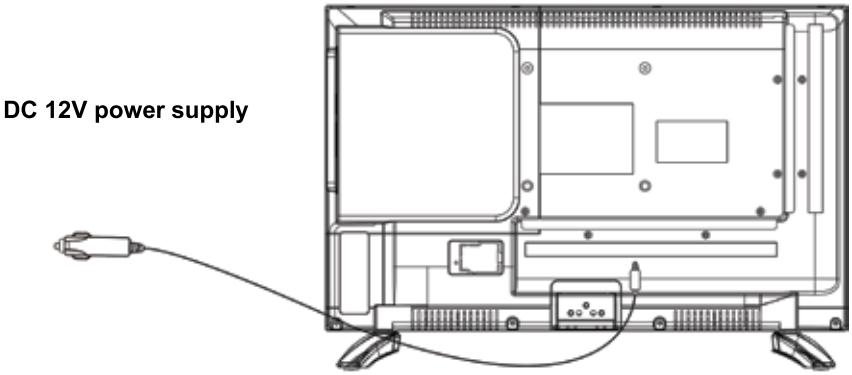

CONNECT EXTERNAL ANTENNA TO UNIT

Install external antenna into antenna jack for best picture.

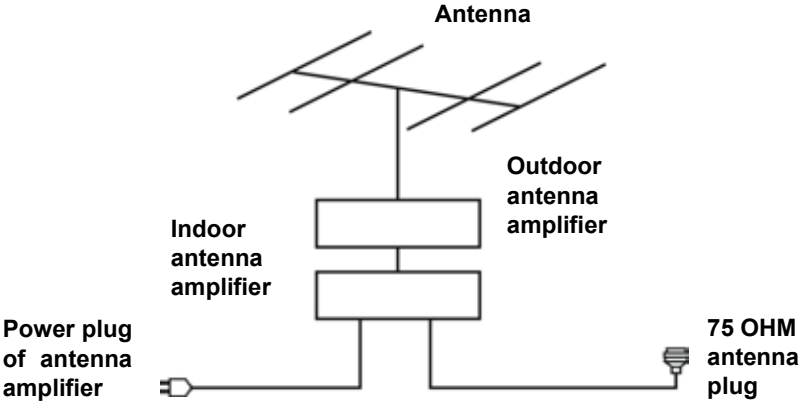

HDMI CONNECTION

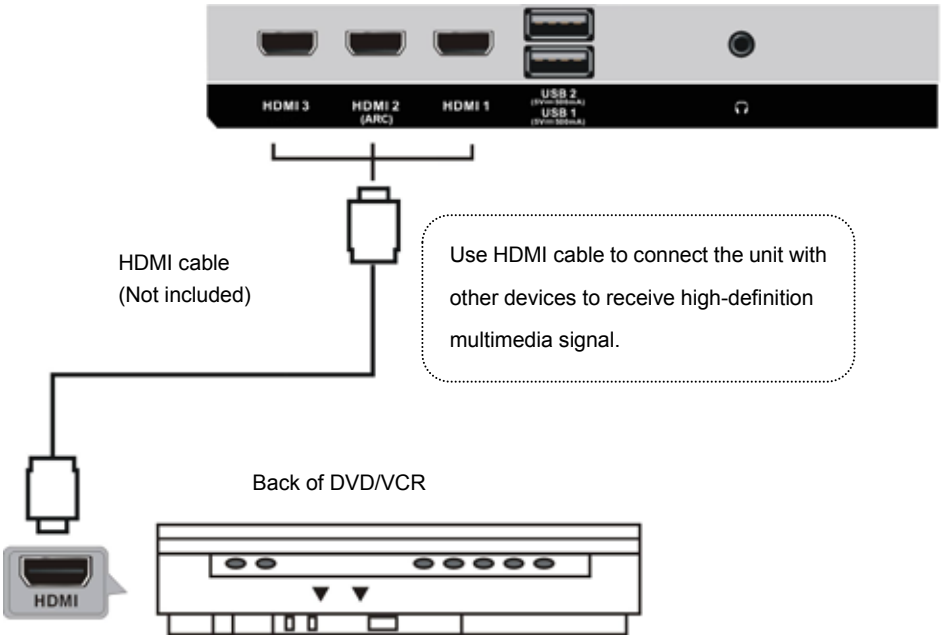

EARPHONE CONNECTION

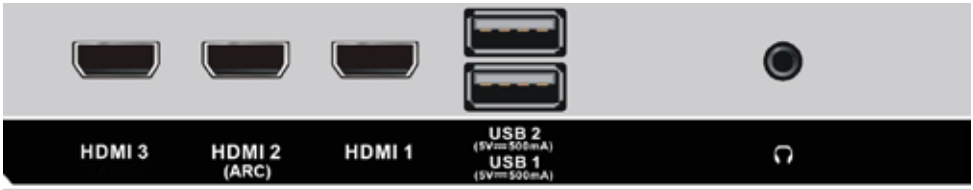

Earphone cable
(Not included)

USB CONNECTION

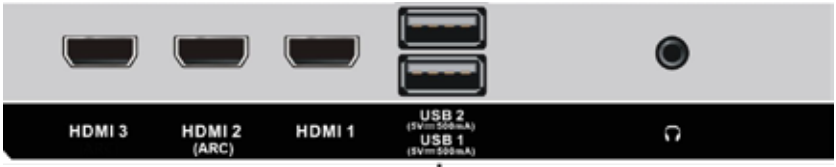

USB Memory Device
(Not included)

OPTICAL CONNECTION

Use OPTICAL cable (not included) to connect the unit with amplifier or other audio decoding devices for digital audio signal output.

LAN (Local Area Network) Connection

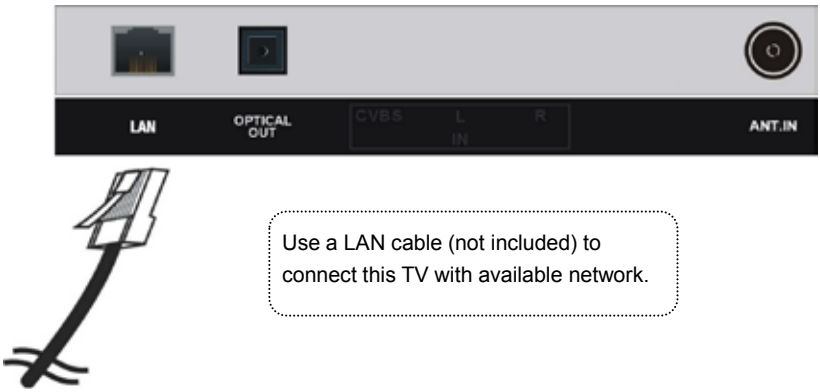

Use a LAN cable (not included) to connect this TV with available network.

Playing Sound through Bluetooth

Connect a smart device to the TV via Bluetooth to play sound from the smart device through the TV's speakers.

1.Connect the TV to the network.
2.Turn the smart device's Bluetooth on, then select the TV from the list of devices.
3.The TV will be connected to the smart device.

Note:
The TV may not be found in the list of smart devices while searching for a broadcast programme or setting up a Bluetooth speaker.
If you connect a smart device to the TV via Bluetooth and listen to the sound of the smart device through the TV speaker, the TV may not be connected to any other smart device.

Connect speakers or headphones to play TV sound.

1.Turn on the output speaker or headphones in Bluetooth mode.
2.Press ⚙ button on the remote control and select ⚙ Settings - Sound - Sound Out - Use Wireless Speaker - Bluetooth Device. Press OK Button to confirm.
3.Select the connectable Bluetooth device name and press OK to connect. Now you can play TV sound on an external speaker or Bluetooth headphones.

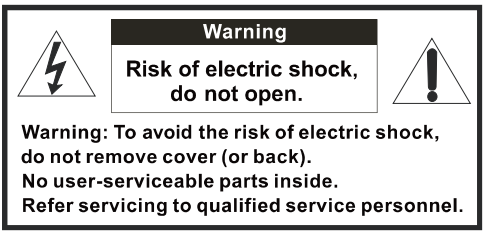

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.
ALWAYS USE UNDER COVER, PROTECTED FROM THE ELEMENTS.

CAUTION: TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS UNIT.

1. Operate only from the power source specified on the unit.
2. Avoid damaging the AC plug.
3. Avoid improper installation and never position the unit where good ventilation is unattainable.
4. Do not allow objects or liquid to fall into the cabinet openings.
5. In the event of mechanical damage, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

Changes or modifications not approved by JVC could void the warranty.

* When the TV set will not be used for long periods of time, disconnect it from mains supply (or car outlet) as well as the antenna for your safety.
* To prevent electric shock do not use this power plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Do not attempt to service the product yourself

Caution
To prevent electrical shock, do not open the TV casing.
There are no user serviceable parts inside.
Please refer to qualified service personnel for repairs.

FIRST TIME SETUP

When turning the TV on for the first time, the **Welcome** screen will appear. Press the **OK** button to commence

Use the ▲/▼/◀/▶ **Direction buttons** to navigate the following options:

Language and Location Settings
Select the on-screen display (OSD) language, your country and time zone from the drop-down lists.

Internet and Device Connection
Connect all of your devices (set-top boxes, blu ray players, soundbars, gaming devices, etc.) to the TV. If using a wired internet connection, connect an Ethernet cable to the 'LAN' port at the back.

Select Wi-Fi network
If you have connected an ethernet cable for wired internet, your TV will automatically connect to the network and skip this step.

If you want to use a wireless (Wi-Fi) network, the TV will now scan for nearby networks. Ensure the TV is within range of your wireless modem or router, and have your password handy. Follow the prompts to input your password and connect your TV to your selected network.

If using an LG Mobile smartphone connected to the desired Wi-Fi network, you can select "via LG Mobile" to connect to the same network.

Terms & Conditions
Accept terms and conditions, or select to view additional details. You can select "Agree All" to agree to all User Agreements.

Paired Devices
The TV will now scan for external devices which can be linked to the Universal Control settings (such as set-top boxes or blu ray players). This will allow services such as Foxtel or Fetch boxes (sold separately) to be linked to your TV's remote control.

Set-Top Box Setup
If not using a set-top box, select "TV Only". If using a set-top box and not wishing to use free-to-air channels, select "Set-Top Box Only".
If wishing to use both, select "TV & Set-Top Box".

Service Area Postcode
Enter your location's postcode.

Programme Tuning
The TV will automatically search and save all available free-to-air channels. The option is provided to search for digital channels only (recommended for most regions), skipping analogue channels.

NOTE:

If "Set-Top Box Only" was selected earlier, this stage will be skipped.

Connect to LG ThinQ
Your TV is compatible with LG smart home devices, and can also play content from your smartphone or personal devices. To connect your TV with LG ThinQ, scan the Android or iOS (iPhone) QR code with your smartphone and follow the prompts to set up.

NOTE:

Service availability may differ depending on country or region.

First Time Setup Completed
Press Close to finalise the setup and go to the Home Dashboard.

HOME DASHBOARD

The Home Dashboard is the central hub for your TV's connections and settings. Use your remote's directional buttons or the Magic cursor and wheel to navigate the dashboard, and press the OK button (wheel) to open a selected menu and view options.

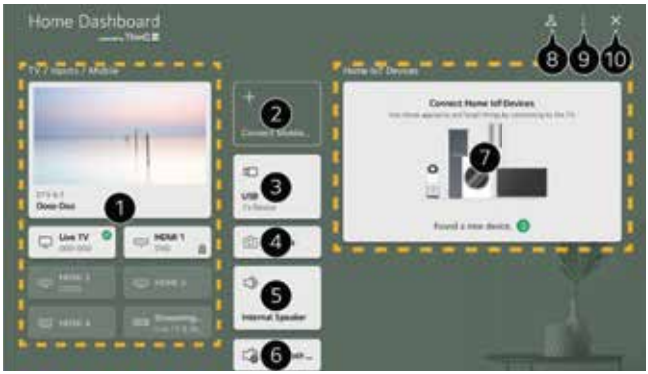

1. You can check and select the external device connected through the external input port or network.
2. Connect your mobile device to TV to share the mobile screen and enjoy the stored contents.
3. It can only be selected if you have connected a USB storage device or a media server.
4. N/A
5. The currently selected output speaker is displayed, and you can navigate to the output speaker settings screen.
6. You can view the list of connected Bluetooth devices and select one.
7. You can check and control the device connected via the Home IoT.
   Please refer to Connecting External Devices -> Connecting Home IoT Devices in User Guide for more information on the action.
8. You can log in or out with your LG ThinQ account.
9. Edit Inputs: You can edit the name of the connected device or apply the related settings.
   Edit home IoT devices : You can hide or show connected Home IoT Devices and rearrange the list.
   Notification : You can turn on or off the notifications on the connected device.
   Universal Control Settings : Move to the Universal Control Settings app.
   User Guide : Move to the User Guide app.
   Quit App : Turns off the app from running in the background.
10. Closes the app.

HOME MENU

Press the **Home (⌂)** button on the remote to bring up the home menu.

Use your remote's directional buttons or the Magic cursor and wheel to navigate through the pages, and press the OK button (wheel) to launch selected app. For Netflix and Prime Video, you can launch the apps directly using the remote control hotkeys. Hovering over ("Focusing" on) options in the home menu will present a Preview in a new bar of options above the home menu.

1. Move to the the APP store.
2. Move to the Browser.
3. Move to the Picture and Music playback menu.
4. Move To The Home Dashboard.
5. Enter the search menu. Search for a variety of content and information using the desired search terms. Need to make sure the network connection is normal.
6. Move to the Edit menu.
7. Move to the Settings menu.

Editing the Home Menu

The apps in the list can be reordered or deleted manually, or set to automatically update based on frequency of use ("Intelligent Edit").

SETTINGS MENU

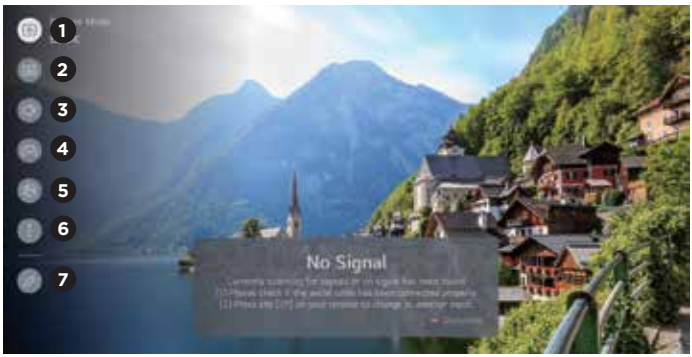

Quick Settings

Press the ⚙ **Settings** button on the remote control to open the Quick Settings menu, a customisable light-weight list of quick options:

1. Picture mode
2. Sound mode
3. Sound out (speaker output)
4. Directs to the Game Optimiser settings.
5. Directs to the Network settings.
6. Full settings menu
7. Edit Mode

Full Settings Menu

Select the "⋮" option (**6.** Full settings menu) from the Quick Settings menu to open the complete settings menu.

Picture

Adjust settings for picture mode, contrast, brightness, colour, sharpness, tint, colour temperature, aspect ratio, energy saving, eye comfort, etc.

Sound

Adjust audio settings, including sound modes, speaker output selection, sync adjustment, 5-band EQ, Ultra Surround configuration, and more.

General
The general settings menu contains many items, such as AI service management, language options, time and location settings, safety (parental guidance and password protection options), account management, home dashboard settings, menu transparency, screensaver, eco mode, and more.

Support
View system and app information, the end-user license agreement, and install software updates (via USB). To reset the TV back to factory settings and access the First Time Setup options again, select “Reset to Initial Settings” from this menu.

BASIC TROUBLESHOOTING

Many minor issues can be resolved by hard resetting, or power cycling the unit or upgrading the firmware.

To perform a hard reset, or power cycle, please use the following steps.

- Unplug it from the main power socket and leave it for 10-15 minutes.
- Press and hold the power button on the TV for 5 seconds.
- Connect the TV back to the power and turn it on.

USB device is not recognised

- Ensure the drive is formatted for FAT32 before using with this TV. Use a computer to format the drive beforehand.

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Check another channel or input
- Check that MUTE hasn't been turned on

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

Picture rolls vertically

- Check all connections

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery polarity (+/-)
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

"No Signal" on HDMI source

- Test the device with a different HDMI cable or port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

For our full TV troubleshooting guide and extended User Manual for this TV, head online to help.kogan.com

BASIC TROUBLESHOOTING

Many minor issues can be resolved by hard resetting, or power cycling the unit or upgrading the firmware.

To perform a hard reset, or power cycle, please use the following steps.

- Unplug it from the main power socket and leave it for 10-15 minutes.
- Press and hold the power button on the TV for 5 seconds.
- Connect the TV back to the power and turn it on.

USB device is not recognised

- Ensure the drive is formatted for FAT32 before using with this TV. Use a computer to format the drive beforehand.

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Check another channel or input
- Check that MUTE hasn't been turned on

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

Picture rolls vertically

- Check all connections

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery polarity (+/-)
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

"No Signal" on HDMI source

- Test the device with a different HDMI cable or port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

For our full TV troubleshooting guide and extended User Manual for this TV, head online to help.kogan.com

GENERAL TROUBLESHOOTING

This section summarises a few common issues you may encounter when using this TV. Contact Customer Service if you need more assistance.

Symptom	Remedy
No power.	Insert the power plug securely into the power outlet.
No picture.	Ensure that the equipment is connected properly.
● No sound. ● Distorted sound.	● Ensure that the equipment is connected properly. ● Ensure that the input setting for the TV and stereo system are correct. ● Adjust the master volume to a suitable volume by pressing VOL+/VOL- button.
No operations can be performed with the remote control unit.	● Check the batteries are installed with the correct polarities. ● The batteries are exhausted: replace them with new ones. ●Point remote control at the remote control sensor and operate it again. ● Operate the remote control unit at a distance of no more than 6m from the remote control sensor. ● Remove the obstacles between the remote control and remote control sensor.
No key operation (by the main unit and/or the remote control unit) is effective.	Disconnect the power plug and then reconnect it. (The player may not be operating properly due to lightning, static electricity or some other factors.)
Symptom(TV)	**Remedy**
No or poor picture.	● Adjust antenna or use an external antenna. ● Relocate the unit near a window (if inside a building). ● Move units away from this product that causes interference. ● Do Auto Tuning again. (- (All Settings) - General - Programmes - Programme Tuning - Auto Tuning) ● Try another channel.
No sound or poor sound.	● Check the audio settings. ● Press MUTE button on remote control to cancel mute function. ● Unplug the headphone.
Noise or other interface.	Electronic equipment near the unit is causing interface. Relocate the unit or move the equipment.

VIEW THE LATEST USER GUIDE ON YOUR TV

WebOS software undergoes regular updates and improvements. We recommend referring to the User Guide on your TV as explained below to get the latest information.

Press ⚙ Button on your remote control to open Settings Menu.
Use **Arrow/OK** Buttons to select ⚙(All Settings) -> **Support** -> **User Guide** to view the up-to-date User Guide.

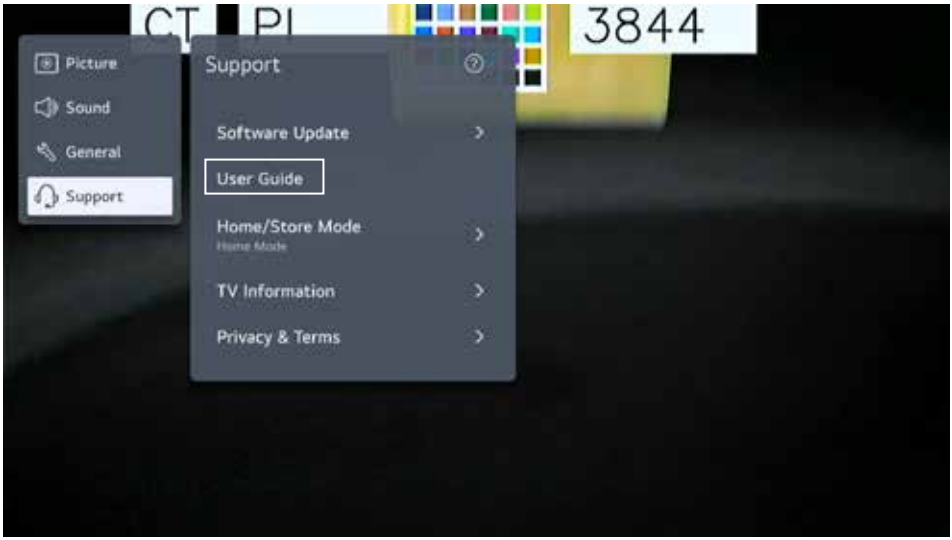

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555